

Update the TV software

Philips continuously tries to improve its products and we recommend that you update the TV software when updates are available.

What you need

To update with a USB storage device, you need:

- An empty USB flash drive. The USB flash drive must be FAT32-formatted. Do not use a USB hard drive.
- A computer with Internet access.
- An archive utility that supports the ZIP file format (for example, WinZip® for Microsoft® Windows® or StuffIt® for Macintosh®).

Step 1: Check the current software version

1. Press HOME.
2. Select [Setup]> [Software settings] , then press OK.
3. Select [Current software info], then press OK.
4. Write down the software version number.
5. To exit, press BACK.

Step 2: Download the latest software

Caution: Do not install a lower version of software than the current version installed on your product. Philips cannot held liable or be made responsible for problems caused by a software downgrade.

1. Insert the USB flash drive into a USB port on your PC.
2. From your PC, navigate to www.philips.com/support.
3. Find your product and locate the software and drivers available for your TV set. The software is available as a zip file.
4. If the software version is higher than the version on your TV, click the software update link.
5. Accept the license agreement and save the ZIP file to the USB flash drive.
6. Using the archive utility, extract *.bin/*.pkg file to the root directory of the USB flash drive.
7. Disconnect the USB flash drive from the PC.

Step 3: Update the TV software

1. Put TV set in **AC OFF** condition
2. Plug USB to USB port of TV set
3. Power on TV set by **AC ON**
4. After few seconds "software upgrading in process..." message will be displayed
5. System will reboot while "software upgrading in process..." disappear.
6. Press "HOME" to enter main menu, then go to "Setup / Software settings / Current software into", press OK, "Release Version" should be changed to the new version. That means firmware update is successful.

Note: To prevent accidental updates to the TV software, delete the *.bin/*.pkg file from the USB flash drive.