


Update the TV and disc player software

Philips continually improves its products. To ensure that your TV is up to date with the latest features and fixes, we strongly recommend that you update your TV with the latest software. Get software updates from your dealer or www.philips.com/support.

Check software version

Before you update the software, check the current software version of your TV and disc player.

The software version displayed on www.philips.com/support consists of two parts. The first part indicates the TV software version while the second part indicates the software version of the disc player.

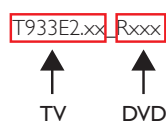

If the version of either the TV software or the disc player software on the website is higher than that on your set, update the software.

Warning


- If a power failure occurs during the update, do not remove the USB flash drive or CD-R/CD-RW from the TV. The TV will continue the update as soon as power is restored.
- If an error occurs during the update, retry the procedure. If the error reoccurs, contact Philips Consumer Care.

Update the TV software

What you need

- An empty USB flash drive. The USB flash drive must be FAT or DOS-formatted. Do not use a USB hard drive.
- A PC with Internet access.
- An archive utility that supports the ZIP file format (for example, WinZip® or StuffIt®).

Step 1: Check the current TV software version

- 1 Press  on the TV remote control.
- 2 Select **[Setup]** > **[Software settings]** > **[Current software info]**, then press **OK**.
↳ The version of the current TV software is displayed.

Step 2: Download the latest software

- 1 Insert the USB flash drive into a USB port on your PC.
- 2 On your PC, navigate to www.philips.com/support.
- 3 Find your product and locate the software and drivers available for your TV.
- 4 If the software version is higher than the version on your TV, click the software update link.
- 5 Accept the licence agreement, and save the ZIP file to the USB flash drive.

- 6 Use an archive utility to extract 'autorun.upg' to the root directory of the USB flash drive.
- 7 Disconnect the USB flash drive from the PC.

Step 3: Update the TV software

Warning

- Do not switch off the TV or remove the USB flash drive during the software update.

- 1 Switch off the TV and disconnect all USB storage devices.
- 2 Connect the USB flash drive (containing the software update) to the USB connector on the TV.
- 3 Switch on the TV.
↳ The TV detects the USB flash drive and starts to scan for software version.
↳ A message prompts you to update the software.

Note

- If the USB flash drive is not detected, disconnect it and reconnect again.



- 4 Follow the on-screen instructions to update the TV software.
- 5 Once complete, disconnect the USB flash drive from the TV.
- 6 Select **[Restart]**, then press **OK** to restart the TV.

Update the TV disc player software

What you need

- A blank CD-R or CD-RW
- A PC with Internet access and CD burner application

Step 1: Check the current disc player software version

- 1 Press  **SOURCE** on the TV remote control.
- 2 Select **[DVD]**, then press **OK**.
- 3 Press  **LIST** on the TV remote control.
- 4 Select **[Preference]** > **[Version info.]**, then press **OK**.
↳ The version of the current software is displayed.

Step 2: Download the latest software


- 1 On your PC, navigate to www.philips.com/support.
- 2 Find your product and locate the software and drivers available for your disc player.
- 3 If the software version is higher than the version on your disc player, click the software update link.
- 4 Accept the licence agreement and save the ZIP file to your PC.
- 5 Use an archive utility to extract 'KDR071.BIN' to a folder in your PC.
- 6 Insert a blank CD-R or CD-RW into the PC.
- 7 Use a CD burner application to copy the disc player software onto the CD.
- 8 Rename the CD as 'PHILIPS'.
- 9 Eject the CD from the PC.

Step 3: Update the TV disc player software



Warning

- Do not switch off the TV or switch channels during the software update.

- 1 Switch on the TV.
- 2 Press  **SOURCE** on the remote control and select **[DVD]**.
- 3 Insert the CD-R or CD-RW into the TV disc reader:
 - ↳ The disc player detects the CD.
 - ↳ A message prompts you to update the software.
- 4 Follow the on-screen instructions to update the disc player software.
- 5 Remove the CD from the disc player when it ejects from the TV.
- 6 Once complete, the TV automatically restarts.